

INSTALLATION INSTRUCTIONS

BUN BUFFER LANDING ZONE TIMER (BBLZT) (MFG. #9900610)

⚠ WARNING ⚠

If the Toaster is on, be careful not to touch any hot surfaces. Personal injury may occur.

AFFECTED PRODUCTS: All McDonald's Vertical Contact Toasters

PARTS INCLUDED:

1 Bun Buffer Landing Zone Timer (Mfg. #9900610)
 1 Instruction Sheet (P/N 1010858)

General

If you experience any problems with these instructions, contact the factory Technical Service Department at 630-784-1000 or toll free in the U.S. at 877-392-7854.

Before You Begin

The Bun Buffer Landing Zone Timer (BBLZT), used in conjunction with that Bun Buffer Landing Zone, ensures that buns are toasted, organized, and used to create a quality sandwich in no more than 2 minutes after toasting.

The BBLZT has two timer channels (left and right) that function independently of each other (Figure 2). The timer is solar powered and mounts easily to the toaster with a pre-attached magnetic mounting strip and clips.

Installing the Bun Buffer Landing Zone Timer

1. **Take the Timer out of the box and allow it to charge under a light source for 2 hours.**

NOTE: Do NOT obstruct the solar cells at the front and top of the Timer or the Timer may not function properly.

Programming the Bun Buffer Landing Zone Timer

1. Simultaneously press both the Start and the Cancel buttons and hold them for five (5) seconds. The timer will beep and both displays will begin to flash. Release both buttons.
2. Press the Start button (while the displays are flashing) to **increase** the time (in 10 second intervals) or the Cancel button (while the displays are flashing) to **decrease** the time (in 10 second intervals). When the desired time is reached, release all buttons. The displays will flash for three (3) seconds before saving the time into memory.

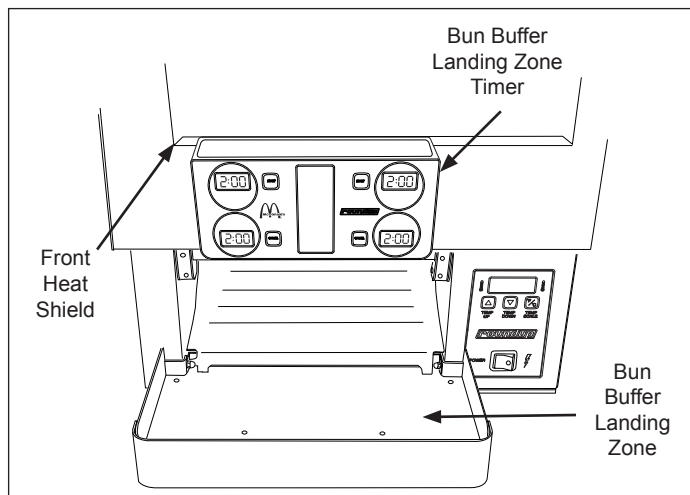 


Figure 1. Attaching the Bun Buffer Landing Zone Timer

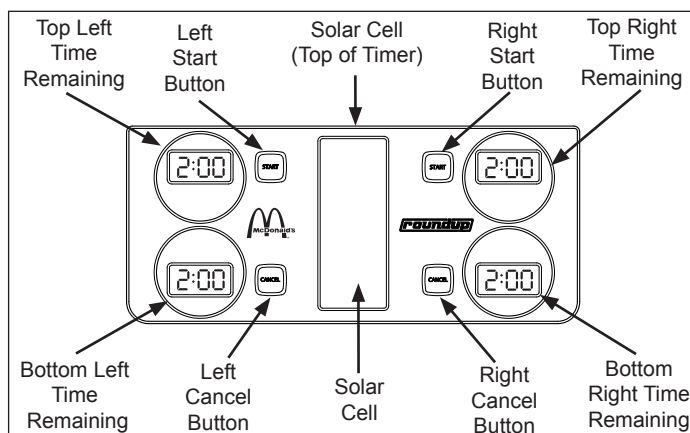 


Figure 2. Bun Buffer Landing Zone Timer

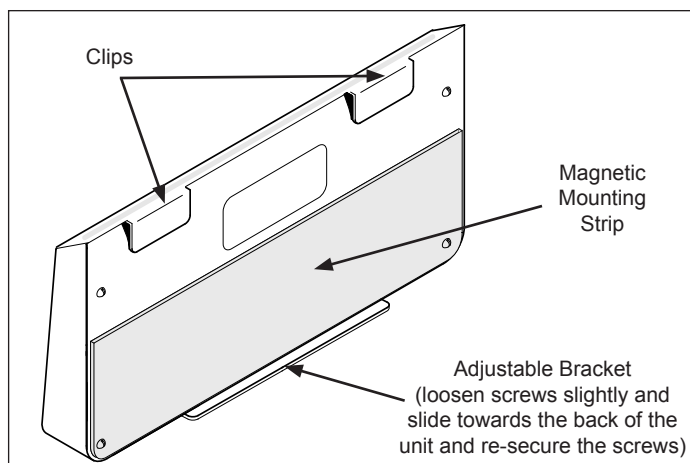 


Figure 3. Bun Buffer Landing Zone Timer (Rear View)

INSTALLATION INSTRUCTIONS

BUN BUFFER LANDING ZONE TIMER (BBLZT) (MFG. #9900610)

Using the Bun Buffer Landing Zone Timer

1. Place 1 or 2 buns in the toaster.
2. When the first bun lands in the Bun Buffer, organize the buns and press the Start Button.
4. When the second bun lands in the Bun Buffer, press Start again.

NOTE: The time in the TOP display moves down to the Bottom display each time the Start button is pressed. The Top display will again begin to count down from 2 minutes. This ensures that the Top display always tracks the time of that last bun to drop into the Buffer (see Figure 4 for an example).

When a button is not pressed for 5 minutes, the Timer will go into an idle state. During the idle state, the displays will show dashes instead of numerals.

NOTE: The timer sounds an audible alarm when the two minute time period is over (two sets of four beeps). Then, the timer begins to count upwards, indicating how many seconds or minutes past the two minute mark the bun has been in the Buffer.

After the alarm sounds, the display will flash until either the Cancel button is pressed or the Start button is pressed (when a fresh bun is toasted).

NOTE: Discard any buns not used within this two minute time period.

Problems with the Timer?

If you experience any problem with your Bun Buffer Landing Zone Timer, contact the manufacturer immediately at 877-392-7854.

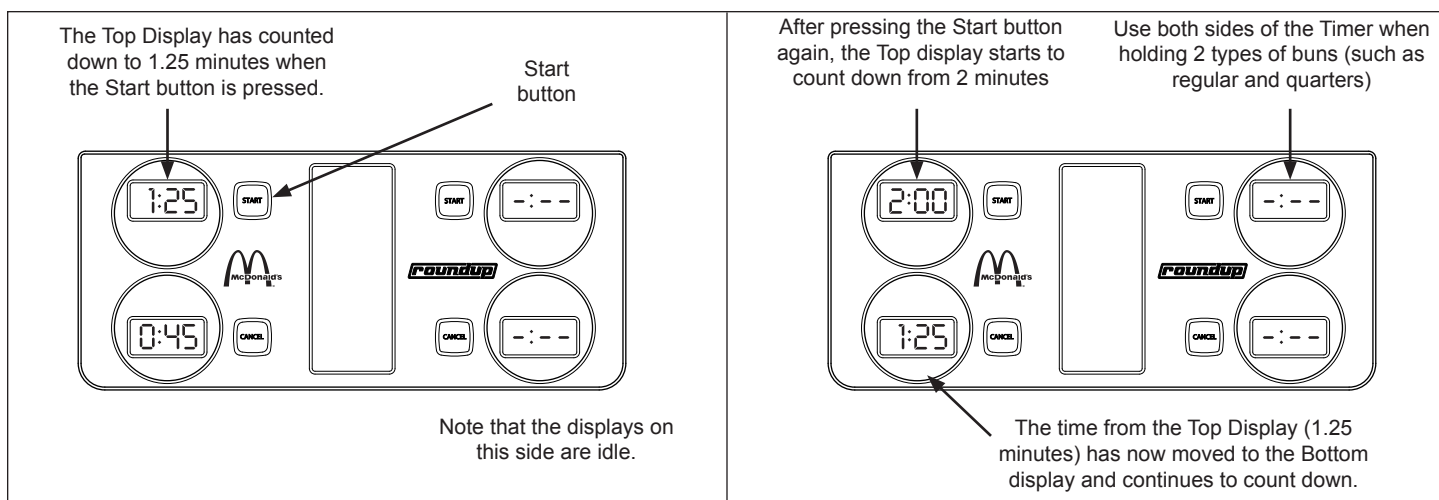 


Figure 4. Using the Bun Buffer Landing Zone Timer (Example)

Limited Warranty

The Bun Buffer Landing Zone Timer (BBLZ) has a 90 day warranty from date of purchase. This warranty does not cover misuse/abuse, damage due to dropping, cover damage, and/or cracked solar panels. The warranty for this timer does not cover travel time or mileage. Contact the Technical Service Department at the factory for any BBLZT warranty issues.