

# A. J. Antunes & Co. Universal Toaster

UTX-200

**Daily maintenance task**

PR 42 D1    Clean universal toaster

Model UTX-200



A. Bun Feeder, B. Control Panel, C. Bun Compression Knob, D. BBLZ

**⚠ Hazards**






These icons alert you to a possible risk of personal injury.

**▨ Equipment alerts**


Look for this icon to find information about how to avoid damaging the equipment while doing a procedure.

**★ Tips**

Look for this icon to find helpful tips about how to do a procedure.


<b>Why</b>	To prevent buns from sticking in the toaster and to extend the life of the release sheet	
<b>Time required</b>	7 minutes to prepare	20 minutes to complete
<b>Time of day</b>	At close or during a low-volume period For 24-hour restaurants: during low-volume periods	
<b>Hazard icons</b>	 Chemicals  Electricity  Hot Surfaces  Moving Parts  Sharp Objects/Surfaces	

**Tools and supplies**

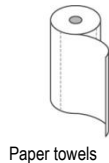

**Procedure**


- 1 Turn power switch off.**  
Turn the power switch off. The red light on the switch goes off. The toaster automatically goes into a cool-down mode for 45 minutes. The display shows “OK to Clean.” You can go to step 2 as soon as you see “OK to Clean” on the display.

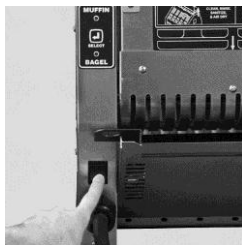


**★ Tip**  
After 45 minutes in cool-down mode, the toaster shuts down automatically.

- 2 Remove parts for cleaning.**  
Put on neoprene gloves. Remove the breakfast chute and crumb tray from the rear of the toaster. Remove the bun feeder, release sheet retainer bar, and release sheet from the top of the toaster. Remove the bun buffer from the front of the toaster. Set the breakfast chute, crumb tray, bun feeder, and bun buffer aside.



 **Hot Surfaces**  
Toaster may be very hot.

- 3 Inspect release sheet.**  
Remove the release sheet from the release sheet retainer bar. Look carefully at the release sheet. If the sheet is worn, creased, or torn, replace it with a new release sheet.

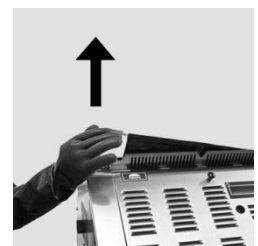

continued ▶

## Clean universal toaster (continued)


### 4 Clean, rinse, and sanitize one side of release sheet.

Place the release sheet on a clean, dry, flat surface. Spray McD All Purpose Super Concentrate (APSC) solution on a clean paper towel. Wipe the entire release sheet firmly with the towel. Immediately rinse the release sheet by wiping the entire release sheet with a clean, sanitized towel dampened with water. Then wipe the entire release sheet with a clean, sanitized towel dampened with KAYQUAT II Sanitizer solution. Allow the sheet to air dry.




#### Chemicals

McD All Purpose Super Concentrate (APSC) solution, KAYQUAT II Sanitizer

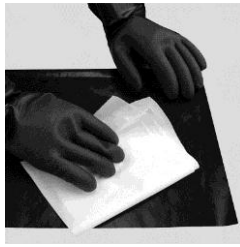


### 5 Clean, rinse, and sanitize other side of release sheet.

Turn the release sheet over. Clean, rinse, and sanitize the other side of the release sheet, using the same steps you used for the first side. Allow the sheet to air dry.

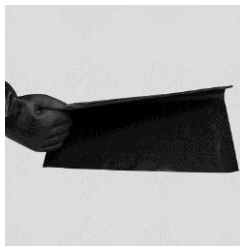

### 6 Reinstall release sheet and release sheet retainer bar.

Slide the release sheet retainer bar into the top of the release sheet. Hang the release sheet retainer bar and release sheet onto the top of the toaster. Place the release sheet between the platen and the two side brackets of the toaster. This keeps it from being pinched by the platen conveyor.

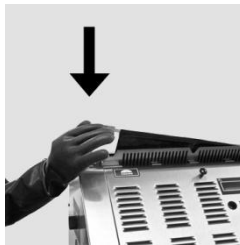

#### ★ Tip

Flip the release sheet from one side to the other each day to extend the life of the release sheet.

### 7 Wash, rinse, and sanitize breakfast chute and other accessories.

Wash the breakfast chute, bun feeder, bun buffer, and crumb tray in the three-compartment-sink.



### 8 Clean outside of toaster.

Wipe down the outside of the toaster with a clean, sanitized towel dampened with KAYQUAT II Sanitizer solution. Place the towel in the soiled towel bucket.



### 9 Open back panel.

Stand facing the back of the toaster. Turn the two back panel release latches from a horizontal to a vertical position. Open the back panel.



### 10 Clean vertical conveyor belt.

Spray McD Heavy-Duty Degreaser on a clean, sanitizer-soaked grill cloth. Wipe the exposed part of the conveyor belt with the grill cloth from side to side.



continued ▶

#### ⚠ Equipment Alert

Cleaning solutions and products should never come into contact with internal electrical components.

#### ★ Tip


There are 2 holes in the master links in the belt. Use them to count turns of the belt.

## Clean universal toaster (continued)

### 11 Advance conveyor belt and clean remainder of belt.

Close the back panel. Turn the release latches from the vertical to the horizontal position. Then, press and hold the muffin selector button and bagel selector button on the back of the toaster. This moves the conveyor belt forward. You will see a part of the belt that has not been cleaned yet. Spray McD Heavy-Duty Degreaser on a clean, sanitizer-soaked grill cloth. Wipe the newly exposed part of the conveyor belt with the cloth from side to side.

Make sure you continue to wipe the belt until it is silver in color.

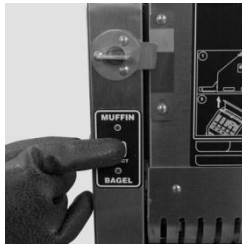

### 12 If Required...

Follow this step **only** if the vertical conveyor belt does not become clean after steps 10 and 11:

Open a packet of McD Hi-Temp Grill Cleaner and empty the contents onto an entrée base.

Use a no-scratch pad to spread a light coating of grill cleaner over the entire exposed part of the conveyor belt.


Once the entire conveyor belt has a light coating of grill cleaner, lightly scrub the belt with the non scratch pad until clean.



### 13 Sanitize conveyor belt.

Wipe the conveyor belt with another clean, sanitized grill cloth sprayed with KAYQUAT II Sanitizer solution. Wipe from side to side during two full turns of the belt. Let the belt air dry.

Repeat this step if necessary to ensure that the conveyor belt is free of any soil and/or cleansers.

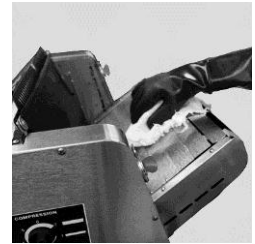

### 14 Close back panel.

As soon as the belt has air dried, close the back panel. Turn the release latches from the vertical to the horizontal position.

#### Equipment Alert

Do not leave the back panel open after the belt has air dried.



### 15 Reinstall breakfast chute and other accessories.

Reinstall the breakfast chute, bun feeder, bun buffer, and crumb tray on the toaster.



### 16 Refer to the document UTX-200 Cooling Fan and Blower Motor Cleaning Instructions (P/N 1011059).

Follow the directions in that document to clean the cooling fans, blower motor and electrical compartment.

**NOTE: It is very important to keep the cooling fans, blower motor, and electrical compartment clean and in top operational mode. Do not ignore these cleaning steps.**

