

# A.J. Antunes & Co. Club Toaster

Model CTX-200


## Daily maintenance task

PR 43 D1 Clean toaster and  
BBLZ

## Semi-annual maintenance task

PR 43 S1 Replace belt wraps

Model CTX-200

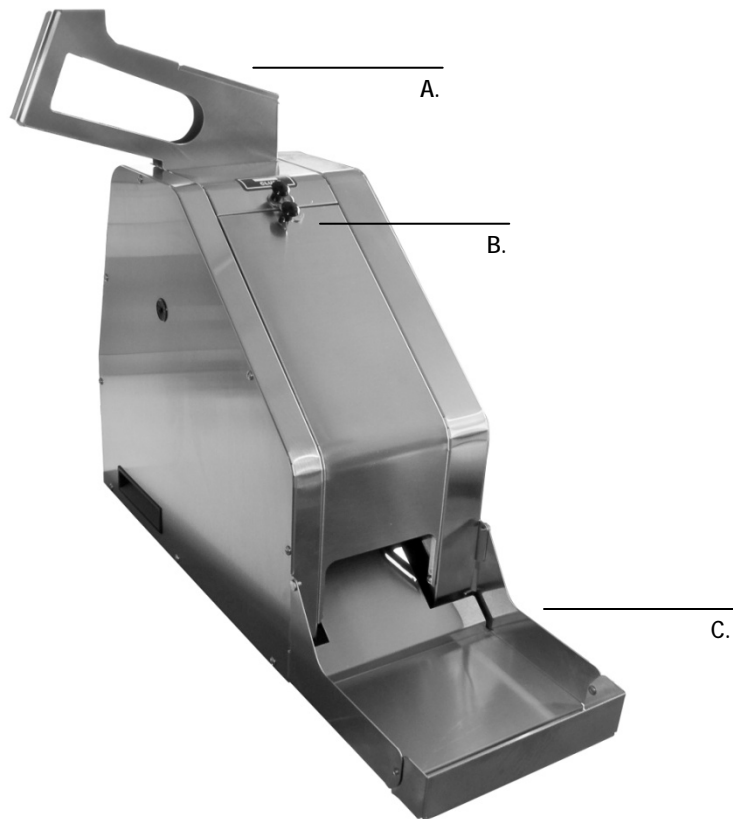

A. Bun Feeder, B. Front Cover, C. BBLZ

### Hazards








These icons alert you to a possible risk of personal injury.

### Equipment alerts

Look for this icon to find information about how to avoid damaging the equipment while doing a procedure.

### Tips

Look for this icon to find helpful tips about how to do a procedure.

Why	To maintain food quality standards	
Time required	1 minute to prepare	10 minutes to complete
Time of day	At close	For 24-hour restaurants: during low-volume periods while breakfast menu is being served
Hazard icons	 Chemicals  Electricity  Hot Liquids/Steam  Hot Surfaces  Moving Parts  Sharp Objects/Surfaces  Slippery Floors	

Tools and supplies



Procedure

**1 Prepare toaster for cleaning.** Turn the toaster's power switch to the off position. The red light on the switch will go out and the toaster's display will show "Cleaning Mode." The toaster will run in cleaning mode for 45 minutes and will then automatically shut down. During this time the fans will continue to run.



**4 Clean outside of toaster.** Spray a clean, sanitized towel with KAYQUAT II sanitizer solution. Wipe down the outside of the toaster with the towel. Include the bun landing area. Allow to air dry.



**2 Remove bun feeder and bun buffer landing zone (BBLZ).** Put on neoprene gloves. Remove the bun feeder and the BBLZ from the toaster and set them aside.



**5 Reinstall bun feeder and BBLZ.** Reinstall the bun feeder and the BBLZ on the toaster.



**Hot Surfaces**  
Toaster surfaces may be very hot.

**3 Wash, rinse, and sanitize bun feeder and BBLZ.** Wash, rinse, and sanitize the bun feeder and BBLZ at the three-compartment-sink. Allow them to air dry.



**Chemicals**  
McD APSC  
Sanitizer solution

Why	To maintain food quality standards	
Time required	1 minute to prepare	10 minutes to complete
Time of day	At close	For 24-hour restaurants: during low-volume periods while breakfast menu is being served
Hazard icons		

Tools and supplies



Procedure

**1 Prepare toaster.**  
Turn the toaster's power switch to the off position. The red light on the switch will go out and the toaster's display will show "Cleaning Mode." The toaster will run in cleaning mode for 45 minutes and will then automatically shut down. During this time the fans will continue to run.



**2 Remove bun feeder and BBLZ.**  
Put on neoprene gloves. Remove the bun feeder and the BBLZ from the toaster and set them aside.



**Hot Surfaces**  
Toaster surfaces may be very hot.


**3 Stop belts.**  
The belts continue to turn when the toaster is in cleaning mode. To stop them, press the "Belts Start/Stop" button.




**4 Release roller tension.**  
Open the front cover and top cover of the toaster. Push in and then push down on both the front and rear bottom rollers until they lock into place. This releases the tension on both belt wraps.



**5 Remove belt wraps.**  
One at a time, disconnect the ends of each belt wrap by sliding one end of the belt off the connecting pin. You may need to rotate the belt wrap by hand to locate the connecting pin. Remove both belt wraps and discard them.

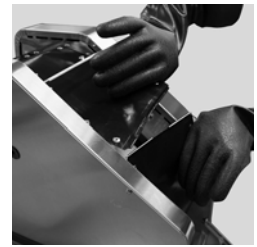

**6 Sanitize new belt wraps.**  
Spray a clean, sanitized towel with KAYQUAT II sanitizer solution. Wipe both sides of the new belt wraps with the towel. Allow to air dry.

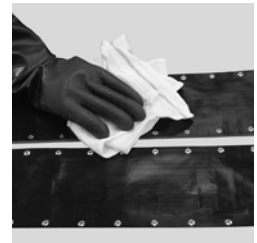

**Chemicals**  
Sanitizer solution

continued ▶

## Replace belt wraps (continued)

- 7 Install bottom wrap belt.**  
Thread the bottom belt wrap around the bottom rear roller, up through the toaster, and around the back top roller. Make sure the connecting pin faces the bottom of the toaster.



Slide the top end of the belt wrap over both sides of the connecting pin to connect the ends of the belt wrap.




**Tip**  
Install the belt wraps so that the gap of the bottom belt wrap is located at the top of the toaster and the gap of the top belt wrap is located at the bottom of the toaster.



**Tip**  
The studs on the belt wrap should face the inside of the toaster.

- 8 Install top belt wrap.**  
Place the top belt wrap around the front upper roller. Make sure the connecting pin faces the bottom of the toaster.

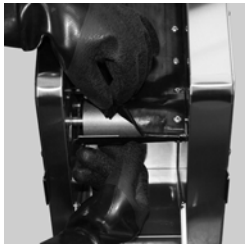

Thread the top belt wrap through the toaster and pull it around the front bottom roller. Slide the top end of the belt wrap over both sides of the connecting pin to connect the ends of the belt wrap.



**Tip**  
The studs on the belt wrap should face the inside of the toaster.

- 9 Lock rollers.**  
Return the lower front rollers to full tension one at a time. First lift up and then pull out each roller, locking it in place.



- 10 Start belts.**  
Press the “Belts Start/Stop” button to start the belts rotating again.



- 11 Reinstall bun feeder and BBLZ.**  
Close the top cover and front cover of the toaster. Reinstall the bun feeder and the BBLZ on the toaster.

