

IS-1000 and WSS-0618-ENC Quick Start Guide

CAUTION

The steamers weigh 125 lbs. each and require two people to lift out of the box and stack on the table. See the owners manuals for specific warnings and cautions.


Instructions

This Quick Start Guide is to assist in the setup of the InfiniSteam-1000 unit and WSS-0618-ENC water filtration unit.


1. Unbox softener, enclosure, and steamers. Remove any protective gray film. Place the softener enclosure in the center of the table between where the steamers stack.



2. Install the cavity drain screens, drawers and drip trays to the steamers. Wash the amber pans and trivets.

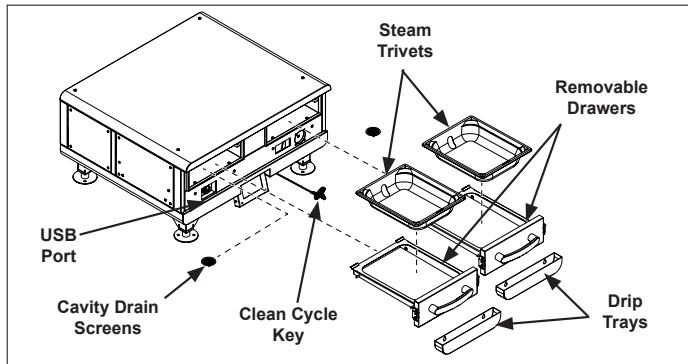


3. Ensure all water lines have been fitted properly to the softener's push-to-connect fittings to prevent leaks.

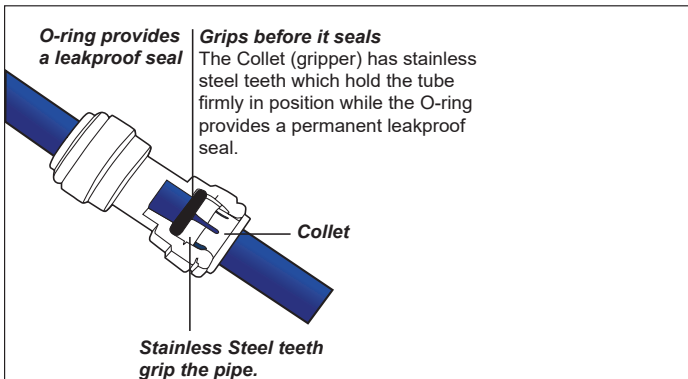

4. Connect the inlet water line, drain hose, and output lines that go to the steamers.




5. Plug the water softener transformer into a standard 120V NEMA 5-15R outlet. A new outlet is recommended to support the weight of the transformer.

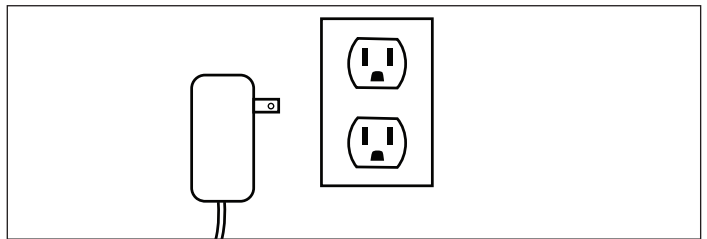

6. Add 40 pounds of water softener salt to the brine tank.

NOTE: Do not allow salt to get into the float mechanism inside the white tube. Failure to do so will result in water overflow.

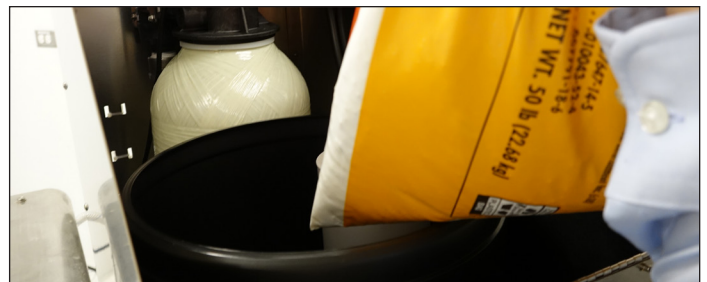


7. Install the white cap on the softener brine tank.

IS-1000 and WSS-0618-ENC Quick Start Guide


8. Turn water on to the softener and press the diamond-shaped button on the left side of the softener control. Hold for 5-10 seconds until the unit initiates the start up process. This takes 45-60 minutes to complete.




9. Flush the lines to the steamers to a drain. Do not plumb them to the steamers yet. The softener must purge the orange-colored stabilizer from the softener first.
10. Mount the bottom steamers of each stack to the approved table. Turn the feet to make the steamer is level using a bubble level.

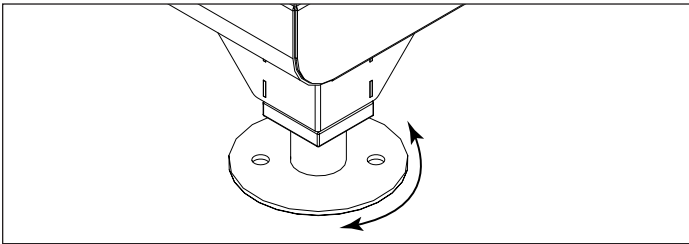


11. Mount the feet to the table using screws through the holes in the feet.

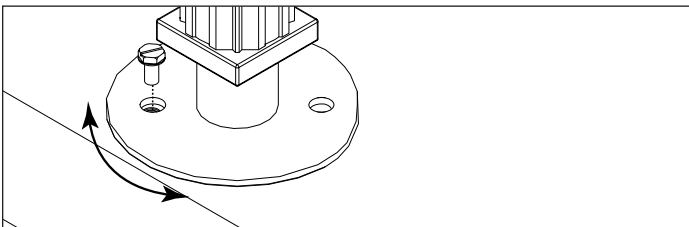

12. Secure the feet of the top steamers to the bottom steamers using screws.

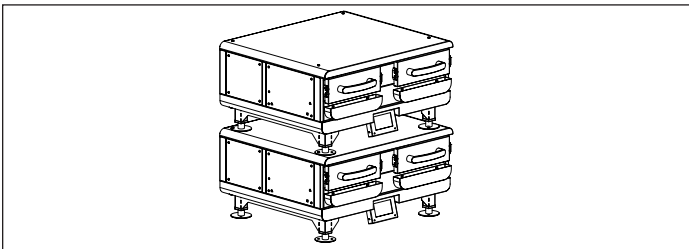


13. Install drain hoses using provided worm-drive hose clamps. Cut to length to make sure the hoses are at least two inches above the floor drain box or into the drain box openings.

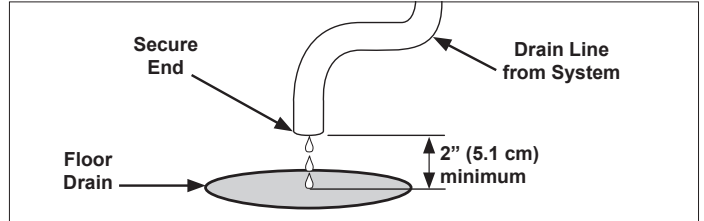

14. Once the softener had been purged and the water is clear (no longer orange) install the water lines from the softener manifold to each steamer's water inlet.



15. Plug the steamers into the 50A 208V 6-50R receptacles installed in the wall.

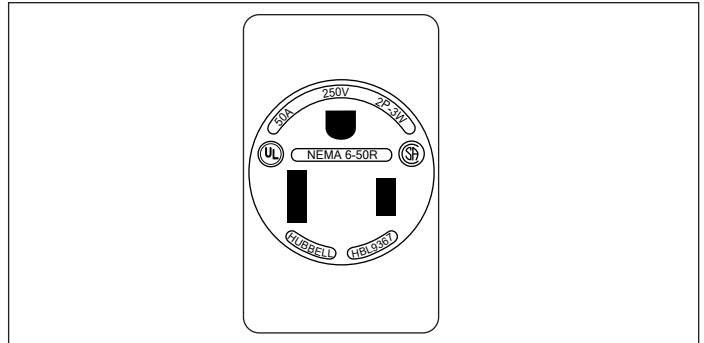

16. The steamer display will show the Firehouse Subs logo when it is ready to turn ON after going through startup.



17. Turn the steamer ON to use. Locate the power button on the right side on the back of the display and hold for 3-5 seconds.

