


Antunes Display Cabinet

Models DC-14A , DC-14R, DC-27L, & DC-22A

Daily maintenance tasks

PR 69 D1 Daily Cleaning

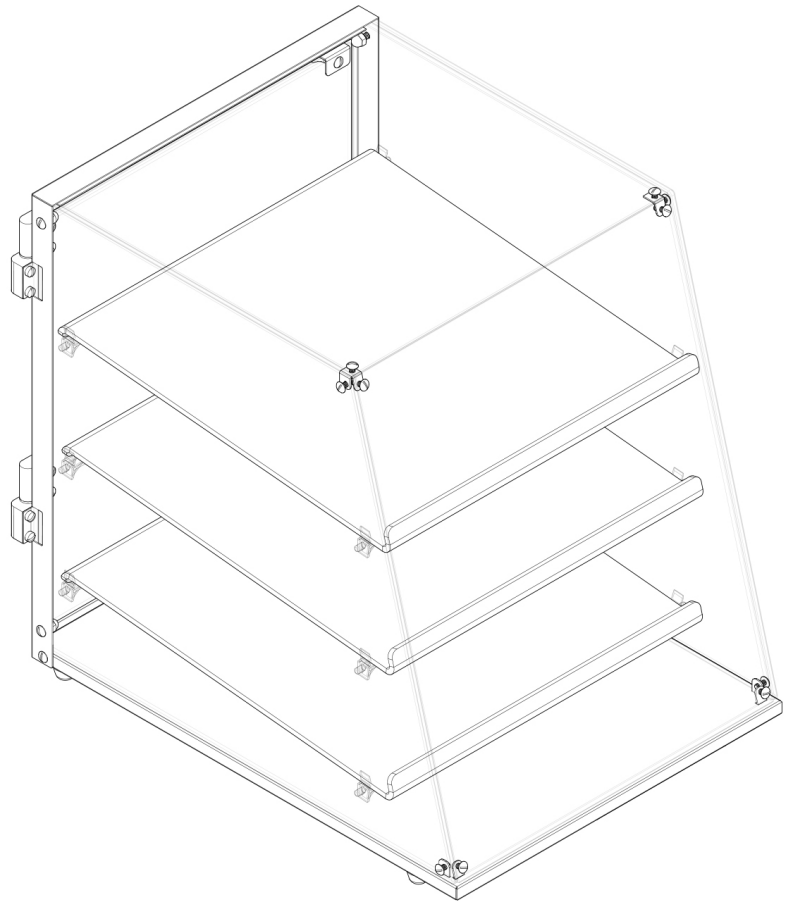

DC-14A Shown

⚠ Hazards


These icons alert you to a possible risk of personal injury.

🔧 Equipment alerts


Look for this icon to find information about how to avoid damaging the equipment while doing a procedure.

★ Tips

Look for this icon to find helpful tips about how to do a procedure

Why	To ensure that the Display Cabinet is clean and displays product in an inviting way.	
Time required	1 minutes to prepare	5 minutes to complete
Time of day	After close	For 24-hour restaurants: during breakfast menu
Hazard icons	 Chemicals	

Tools and supplies



All Purpose Super Concentrate (APSC) Solution



Sanitizer Solution



Bucket, clean and sanitized towels



Bucket, soiled towels




No-Scratch Pad

Procedure


1. Remove and store food product.

Turn the unit off and unplug the power cord (DC-27L only). Remove food product from the display cabinet and store properly.

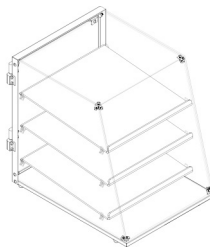

2. Remove shelves.

Remove the shelves from the display cabinet. Remove crumbs from the shelves with a clean, sanitizer soaked towel and dispose the crumbs into the trash receptacle.

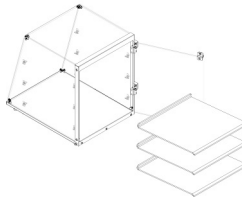


Chemicals

Sanitizer Solution.

3. Wash shelves.

Wash the shelves at the 3-compartment sink with hot All Purpose Super Concentrate (APSC) solution. For heavier soils, spray with Heavy Duty Degreaser Solution.

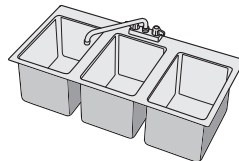

Rinse the shelves in clean, hot water and then sanitize for one minute with Sanitizer Solution. Allow to air dry.




Chemicals

All Purpose Super Concentrate (APSC), Heavy Duty Degreaser Solution, Sanitizer

4. Clean display cabinet.

Spray and wipe display case inside and out with a clean, sanitizer-soaked towel sprayed with All Purpose Super Concentrate (APSC) solution. For heavy soils, scrub the display cabinet with a NO-SCRATCH pad.

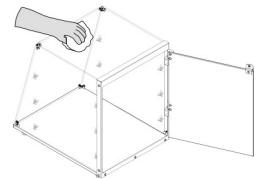


Chemicals

All Purpose Super Concentrate (APSC), Sanitizer Solution.

5. Rinse display cabinet.

Rinse the display cabinet inside and out with a separate clean, sanitizer-soaked towel.

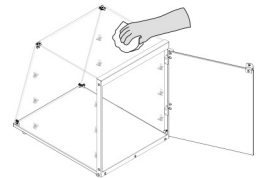


Chemicals

Sanitizer Solution.

6. Sanitize display cabinet.

Spray the inside and outside of the display cabinet with Sanitizer solution and allow to air dry.

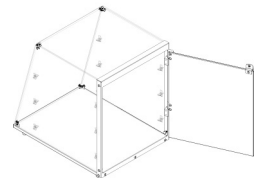

Chemicals

Sanitizer Solution.

7. Install shelves and product.

Install shelves into display cabinet. Load product into display cabinet. Plug in the power cord and turn the unit on (DC-27L only).

