


Daily Cleaning of MES-1200 and ESDZ-1200 Egg Stations

Needed:

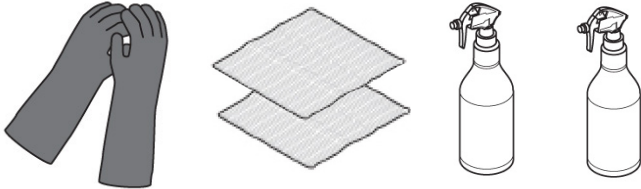

1. Neoprene gloves
2. Two clean white towels
3. Kay Super Contact Cleaner
4. Kay Sanitizer



5. Plastic scraper (do not use metal scrapers)

Procedure:

1. Turn off the egg station and wait for it to cool down.
2. Scrape the surface of the grill.
3. Wearing neoprene gloves, clean the grill surface with Kay Super Contact Cleaner and one of the towels.
4. Follow with Kay Sanitizer and the second towel.

